











LOST OR FORGOT COMBINATION CODE - KEY ONLY ACCESS



UNLOCK: INSERT KEY, TURN TO UNLOCK POSITION. LIFT UP AND OPEN LID. CHANGE THE COMBINATION CODE BY PRESSING ANY DIAL RESET BUTTON WHILE TURNING THE CORRESPONDING WHEEL ONE NUMBER AT A TIME. WHEN YOU FEEL THE RESET BUTTON MOVE DOWNWARD OR IN, THE NUMBER SHOWING IS THE LOST OR FORGOTTEN CODE NUMBER FOR THAT WHEEL. REPEAT FOR THE REMAINING TWO WHEELS. ONCE THE OLD CODE IS SHOWING, REPEAT SECTION (B) ABOVE TO SET A NEW CODE.



LOCK: RETURN KEYLOCK TO LOCKED POSITION. REMOVE KEY. SCRAMBLE COMBINATION CODE TO LOCK.

QUICK START VIDEO





CARE AND SAFETY

Clean surface with warm damp cloth only | Silicone organizer - dishwasher safe | BPA Free
Store keys outside of container securely, hidden and out of reach | Keep fingers out of the gap between lid and container
Always practice safe, responsible storage | Store at room temperature | Keep in a safe place and out of the reach of children

